


# Parts Breakdown Power Head Assembl And Accessories - All Models

@

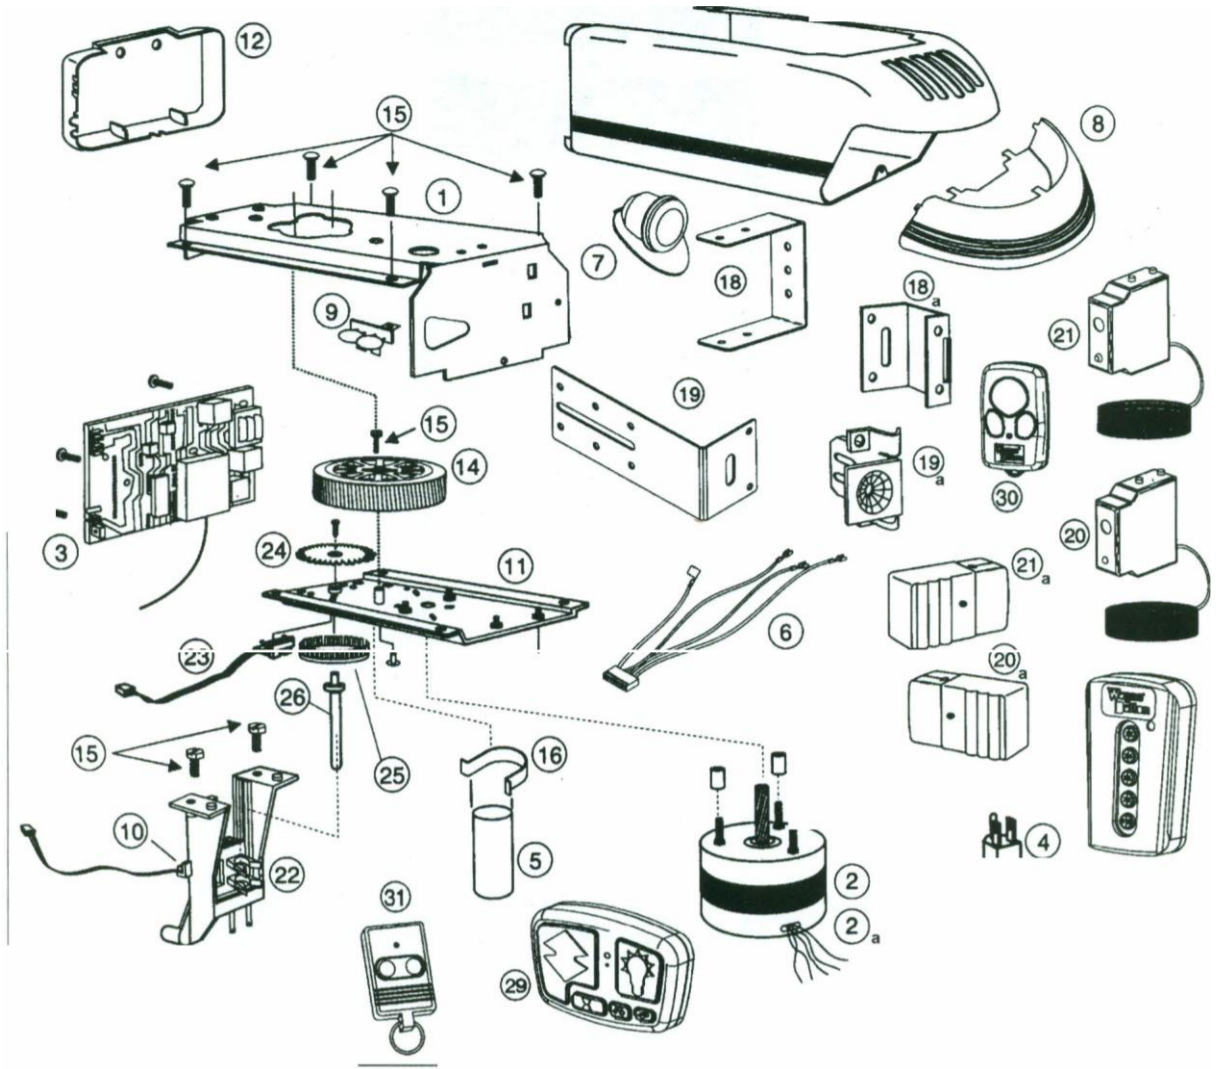

Per Unit

00®

#.	Part #	Description	#	#.	Part #	Description	#
1.	157167	Frame	1	18.	157166	Wired Sensor Mounting Bracket	
2.	292123 or 291385	Motor - 1/2 H.P.	1	18a.	157159	Wireless Sensor Wall Mounting Bracket	
2a.	291386 or 291387	Motor - 1/3 H.P.	1	19.	157165	Wired Sensor Sliding Bracket	
3.	306132	Motor Control Board (all models)	1	19a.	157162	Wireless Sensor Mounting Bracket	
4.	306364	Power Supply Cord	1	20.	260597	Wired Receiving Unit	
5.	260570	Capacitor - 1/2 H.P.	1	20a.	260598	Wireless Transponder Unit	# Per Unit
6.	306486	Wiring Harness	1	21.	260600	Wired Sending Unit	2
7.	269028	Light Socket	1	21a.	260599	Wireless Sending Unit	
8.	260552	Lens	1	22.	252092	Limit Assembly (includes items #10, 27 & 26)	2
9.	252994	MOV Surge Suppressor	1	23.	249321	LED interrupter	2
10.	252993	Limit Switch	7	24.	260556	Limit Driver Gear	
11.	252125	Sub-Frame	1	25.	157039	Interrupter Disk	2
12.	260532	End-Cap	3	26.	260557	Shaft, Limit Driver	
13.	260530	Housing		27.	157055	Limit Adjuster	
14.	260525	Gear, Driven		28.	306134	5 Button Wireless Keyless Entry	
15.	251248	Screw 1/4-20 x 3/8		29.	302090	5 Button Wall-station Transmitter	
16.	301675	Capacitor Clamp		30.	302083	3 Button Mini Visor Transmitter	
17.	157496	5/16" Motor Screws		31.	299264	2 Button Mini Transmitter	